

Cookbook Instructions

Tote system with Amigo T5/R5

The tote system is a desktop speaker that amplifies the teacher's voice. An Amigo R5 receiver is connected to the speaker and placed inside the tote bag.

- Place the transmitter and receiver on the two tail charger. When the units are charging the light on the unit will be steady green. The first time you charge the units, they need to charge for a full 14 hours before use. Check the power switch on the side of the unit to ensure that the switch is in the off position (bottom position). The units will not charge in the on position.
- Insert the 4 batteries for the tote speaker into the dedicated charger. You MUST charge either 4 or 8 batteries at one time. Make sure the orange tabs are flipped down to charge the AAA batteries. Connect the provided adapter to the charger and plug it into the outlet.
- The LED indicators will light up RED when the charging is in progress. IT will turn GREEN when the batteries are fully charged. Unplug the charger from the power source and remove the batteries when they are fully charged. Batteries will be charged in about 6 hours. (The rechargeable batteries from the transmitter, the receiver, and the tote speaker can all be charged at the same time through the 6 hour charger.
- Once the batteries have been fully charged, open the speaker battery door compartment (located at the bottom of the speaker) with a twisting motion (there are arrows to indicate which way to turn). Place batteries into speaker by following the polarity symbols. Replace battery door on the speaker by twisting it in the opposite direction. *this can be difficult to do the first few times—remember to look at where the tabs are on the battery door and match them with the slots on the inside of the battery compartment.
- Unravel the audio cord from the bottom of the speaker and make sure the conversion adaptor is on the end of the stereo plug. Plug the adaptor into the headphone jack of the R5 receiver.
- Turn the power switches to the ON position. The power switch is located on the side of the units.
- Make sure both the receiver and the transmitter are on the same channel. The display on the front of the units shows the channel number. To check the channel number on the receiver, switch the selector at the top of the unit to channel mode (Ch). The numbers should be the same. If they are not, use the channel buttons on the front of the unit. Press and hold button until the display blinks. Once the display blinks, use the buttons to change the unit to the matching channel.
- The child can adjust the FM volume according to their needs. However, if the speaker is used at the higher volumes there is a higher risk of feedback occurring. The suggested starting point for the volume on the R5 is 12. To adjust the volume on the receiver unit, switch the selector on the top of the unit to the Volume mode. The display will then show the volume (0-32). Use the buttons on the front of the unit to increase or decrease the volume in 1 decibel steps.

- When finished with the units for the day plug in charger and leave overnight. Once again, the transmitter and receiver can be charged on the two-tail charger or in the dedicated charger, if removed from the units. The tote speaker batteries must be removed from the speaker to charge.

The transmitter allows the teacher to transmit to the student by directly bypassing distance, background noise, and classroom reverberation.

- Plug lapel mic into the top of the unit where the picture of the microphone is.
- The transmitter is worn at the waist (or in a pocket) with the lapel mic clipped approximately 4 inches from the speaker's mouth.
- Turn unit on by switching the power switch to the on position.
- The light at the top of the unit will be steady red when transmitting.
- When leaving the classroom, turn unit off.
- Return to charger when finished using. Charge overnight.

LED and Display Indicator

- The LED light on the tote speaker has two colors: GREEN for on and batteries are good and RED for batteries need to be charged.
- The LED and the display on the Amigo T5 and R5 not only indicate the power is on, but also shows:

LED	Meaning
Steady Green	Charging
Steady Red	On & Transmitting/Receiving
Blinking Green	Low Battery
R5 Blinking Red	No FM Signal
T5 Blinking Red	Muted
Off	Off or Error

Display	Meaning
R5 Steady	Volume Mode
R5 Blinking	Channel Mode

Troubleshooting:

Problem	Solution
The battery will not charge	<ul style="list-style-type: none">• Check that the batteries are positioned correctly and that the batteries are the same batteries that were sent in the system.• Check that the charger is plugged into outlet.• Check that the transmitter and receiver are both off when attempting to charge. If both have been checked and still not charging, return entire system to Resource Center.
No sound/ no signal reception	<ul style="list-style-type: none">• Check that the receiver is on and correctly connected.• Check that the transmitter battery is working and that the unit is turned on.• Make sure that the transmitter and receiver are on the same channel. If you have done all the above and units are still not working, return entire system to the Resource Center.